


ADRASAN SOFABED


A) REMOVING PROTECTIVE PLASTICS

1) PULL AND REMOVE THE PLASTIC IN THE SOFA FRAME AND SOFA BACK

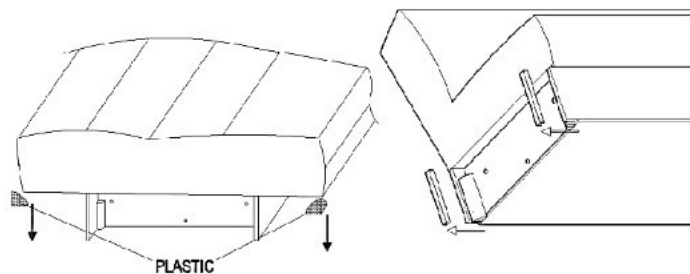

B) MONTAGE OF CASE AND ARMRESTS

1) FIX THE CONNECTION APPARATUS (1) WITH THE SCREW HOLES ON THE ARMRESTS 2) ATTACH THE ARMREST TO THE CASE WITH CONNECTION APPARATUS FROM THE SCREW HOLES 3) MONTAGE THE WING NUTS (THUMBSCREWS) TO THE CONNECTION APPARATUS (2)

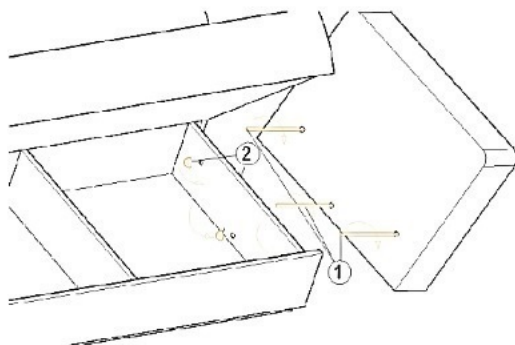

C) MONTAGE OF LEGS FOR RESTING PART

1) PUT THE LEGS AS IN THE PICTURE (3) AND FIX WITH THE SCREWS (4)

