






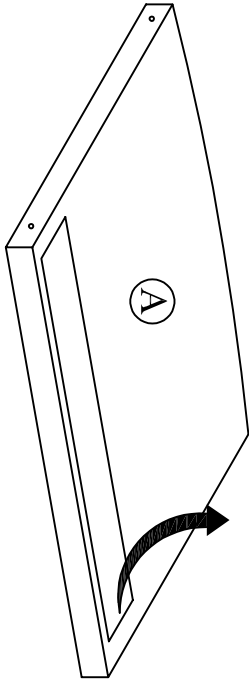


ASSEMBLY INSTRUCTION

MODEL : CF 9352-B(6)


Step 1 : Take out side wing (P) from the back headboard (A) as shown.

A		1 pc
B		1 pc
C		2 pcs
D		2 pcs
E		2 pcs
F		4 pcs
G		1 pc







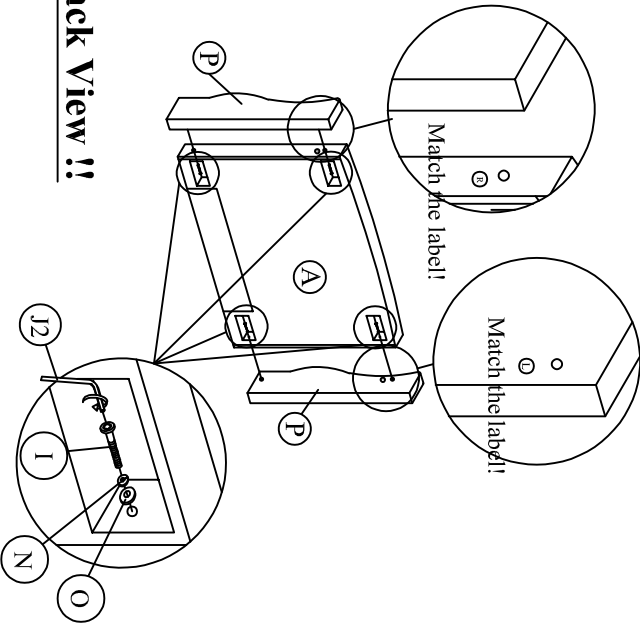





**Back View !!**


Step 2 : Tighten the side wing (P) to headboard (A) as shown.



**Back View !!**


Step 3 : Install the legs (D) to footboard (B) and headboard (A).

H		4 pcs
I		4 pcs
J		1 pc
K		4 pcs
L		3/4 pcs
M		4 pcs
N		4 pcs
O		4 pcs
P		2 pcs
Q		8 pcs

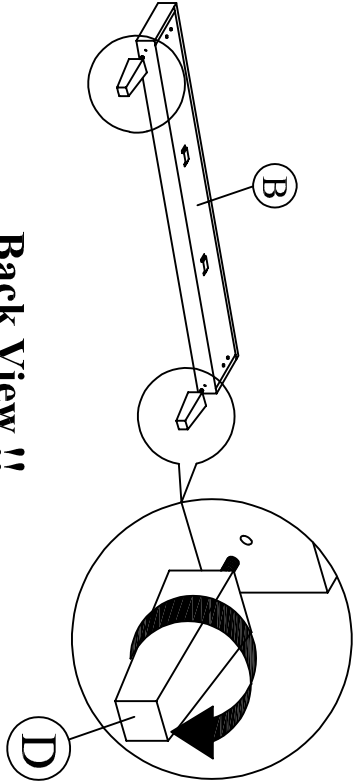


**Back View !!**

Step 4 : Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

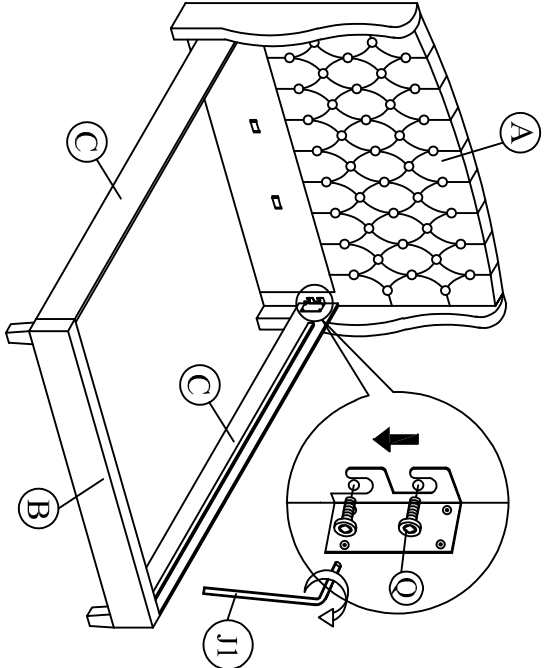


Step 5 : Attach the support legs (F) to the center rail (E) of the bed as shown.

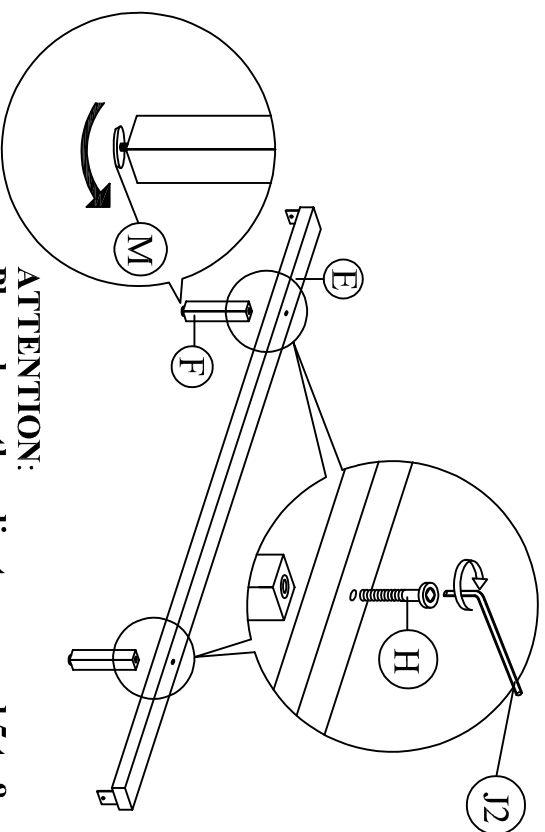

**ATTENTION:**  
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 6 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (K) using screw driver (not included) to the headboard (A) and footboard (B).

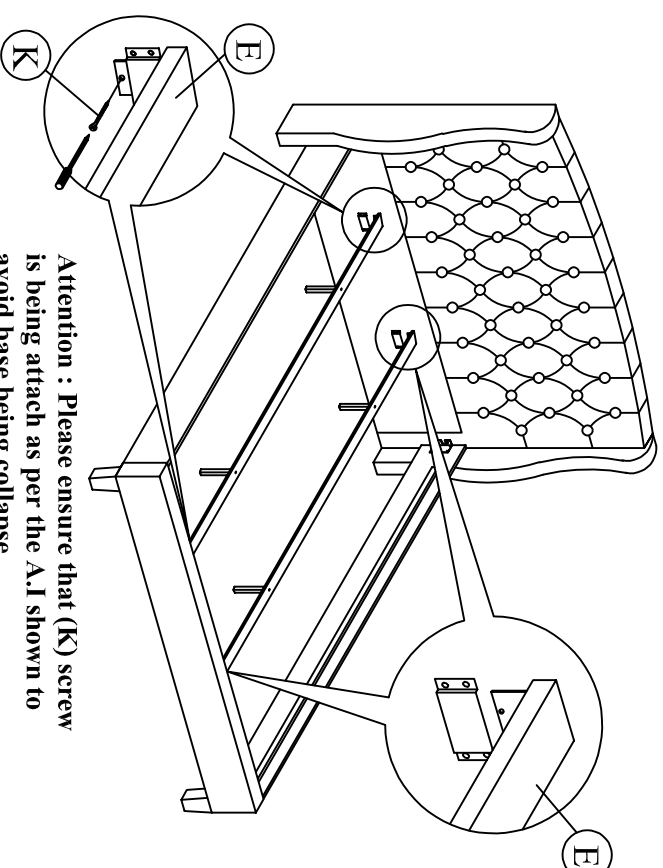

**Attention :** Please ensure that (K) screw is being attach as per the A.I shown to avoid base being collapse.

Step 7 : Affix the Slat (G) to the side rail support wood and the center rail (E). Tighten all the 4 corner.

