


















Model : CF 9260-C (4'6")

Assembly Instruction

A		Headboard	1pc
B		Footboard	1pc
C		Side Rail	4pcs
D		Footboard Legs No.09 - 60 x 150(F)	4pcs
E		Side Rail Legs No.127 30 x 80 x 240mm	2pcs
F		Center Rail 870mm	2pcs
G		14 pcs slat 1397mm	2pcs
H		Support Legs 215mm	4pcs
I		JCBB M8 x 20	8pcs
J		JCBC M6 x 30	8pcs
K		JCBC M6 x 60	4pcs
L		Allen Key 65mm	1pc
M		Allen Key 70mm	1pc
N		CSK Screw 32mm	28pcs
O		Flat Washers	8pcs
P		Small Adjuster	4pcs


Step 1 : Unzip the black non-woven fabric on the back of headboard and take out all the parts out.

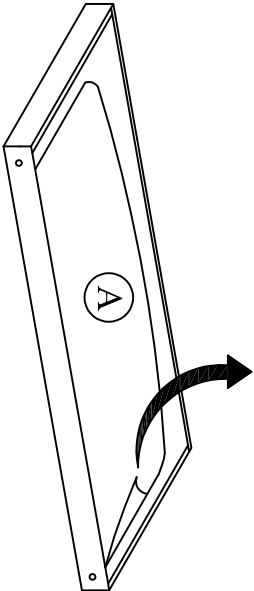

Attention: Zip the black non-woven fabric after take out the parts !:


BACK VIEW

Step 3 : Attach the JCBB Bolt (I) to the headboard (A) and footboard (B).

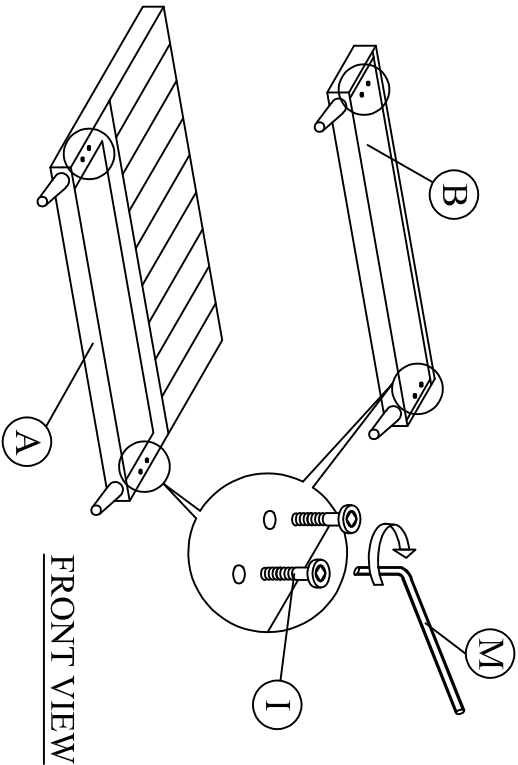


FRONT VIEW

Step 2 : Fix the footboard (B) with legs (D) as shown.

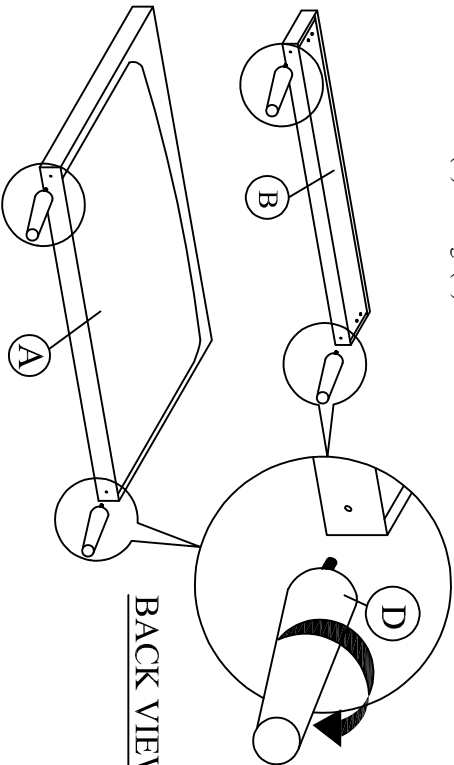


BACK VIEW


Step 4 : Attach the side rail leg (E) to the side rail (C).

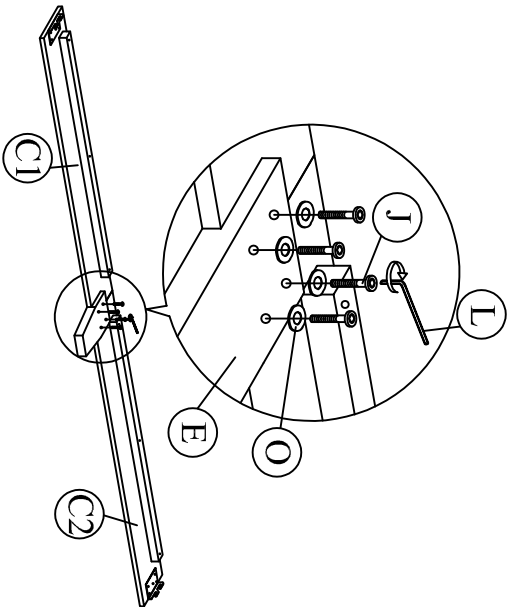

Step 5 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

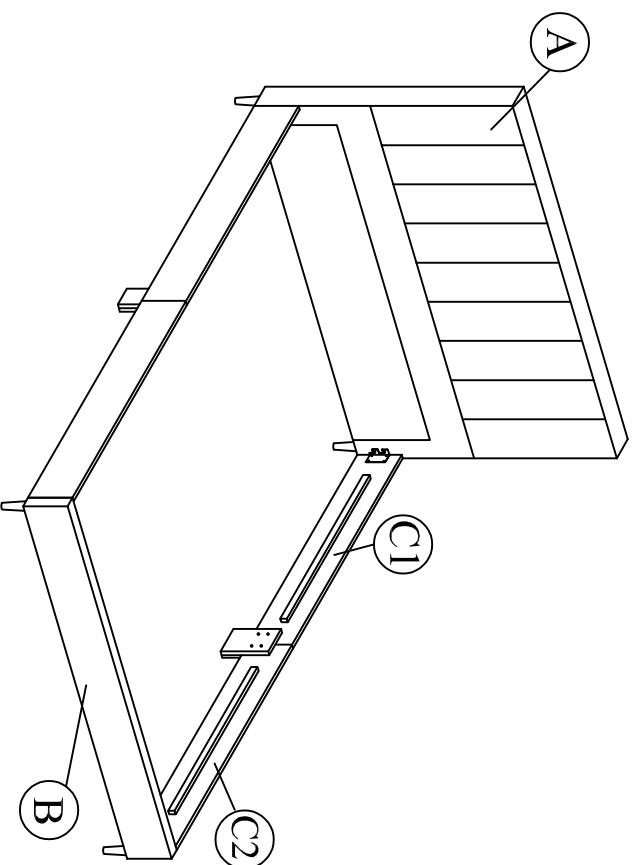

Step 6 : Attach the support legs (H) to the slats (G) and center rail (F).

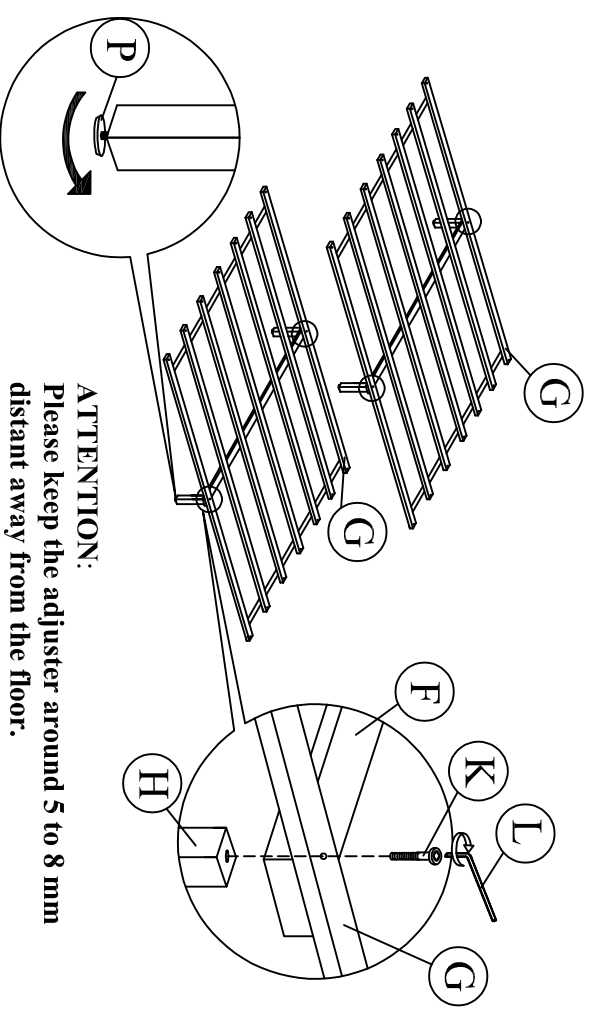

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 7 : Tighten the 4 Corner with Allen Key (M). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

