



1. Drawing of the bathtub installation
Position der Wanne aufzeichnen

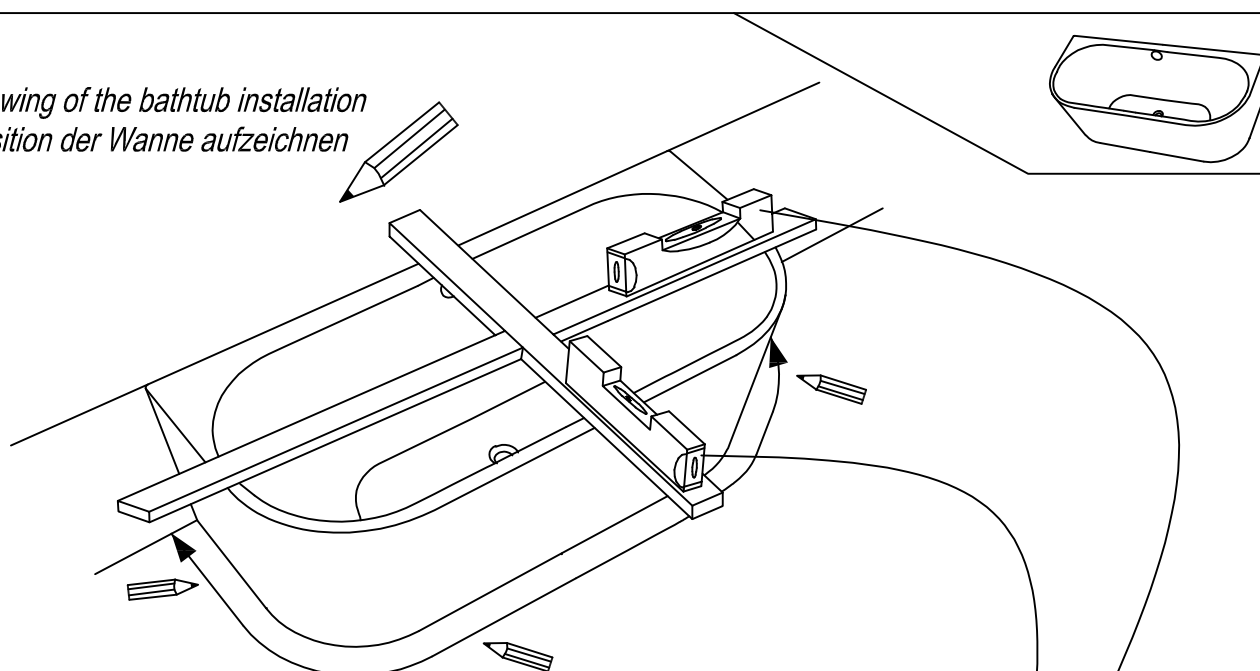


2. Leveling of the bathtub height
Höhe der Wanne nivellieren

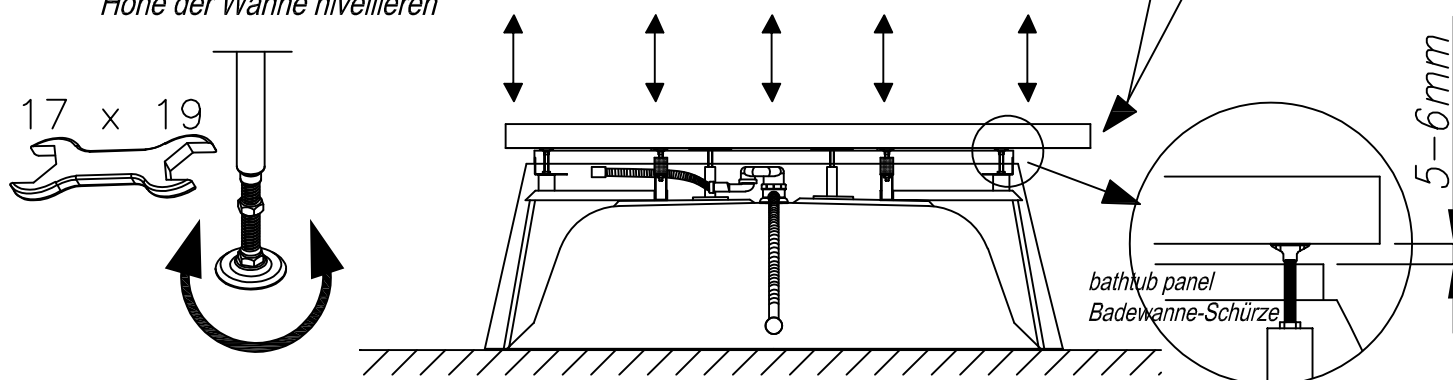


3. Installation of the bracket on the floor
Träger in den Boden befestigen


Dream 180x80 X=425mm
Dream 170x75 X=390mm

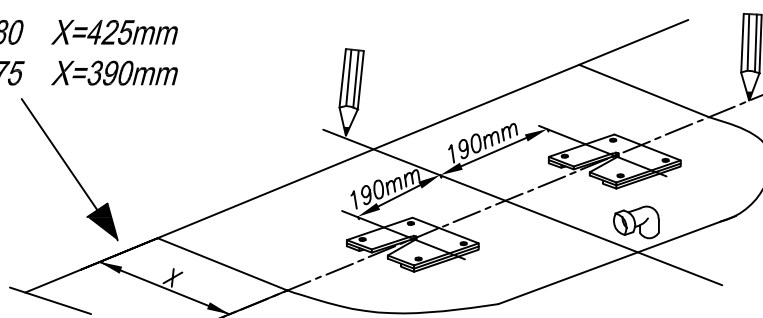


3a.

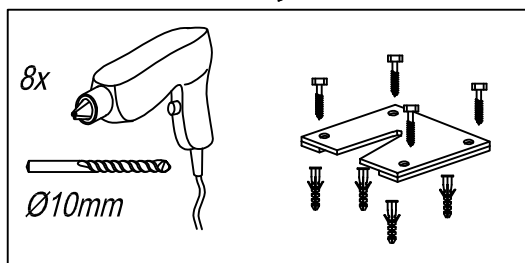

3b.

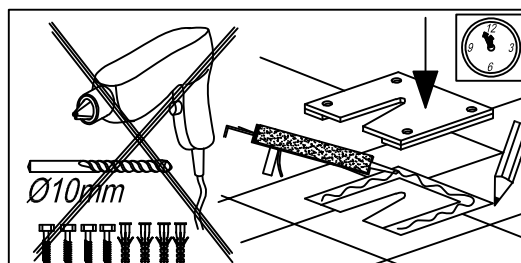

4. Installation of siphon
Siphon-Montage

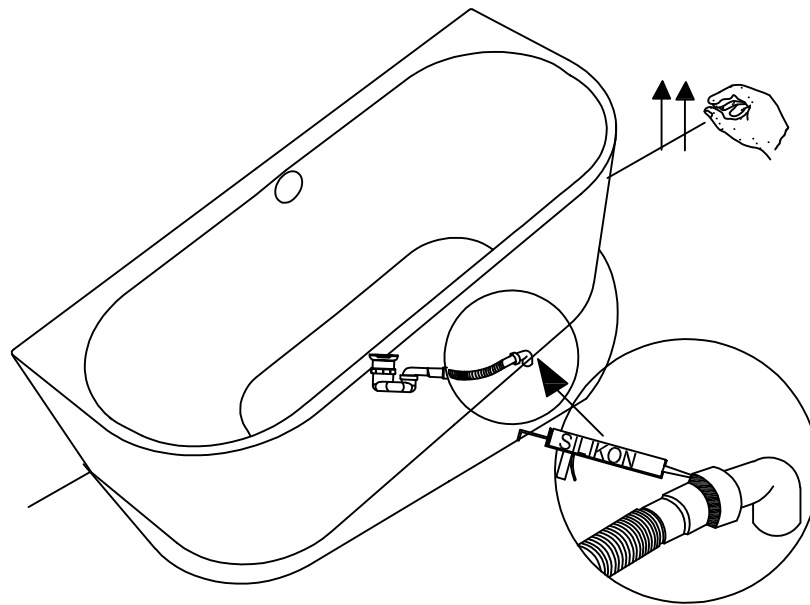

5. Installation of the bathtub in the mounted bracket
Badewanne in den fixierten Träger stellen

